


MDR, Multi-dynamic Range, Authentication Scanner

Suprema Multi-dynamic Range (MDR) Technology

Compared to the fingerprint access control devices installed in a fixed position, fingerprint authentication scanners are more likely to be used in a varied positions and locations. In particular, light (ambient light), Among those environmental factors, light condition around the scanner creates greater influence and often causes decrease in quality of captured fingerprint images. Suprema developed industry's unique multi-dynamic range (MDR) technology to ensure consistency in quality of fingerprint images regardless of lighting conditions and moisture level of finger skin. Suprema's patented MDR technology is available in selected BioMini models, namely BioMini Plus 2, BioMini Combo and BioMini Slim. MDR technology delivers greater benefits to mobile authentication applications where fingerprint scanners are connected with mobile devices in varied locations and positions.

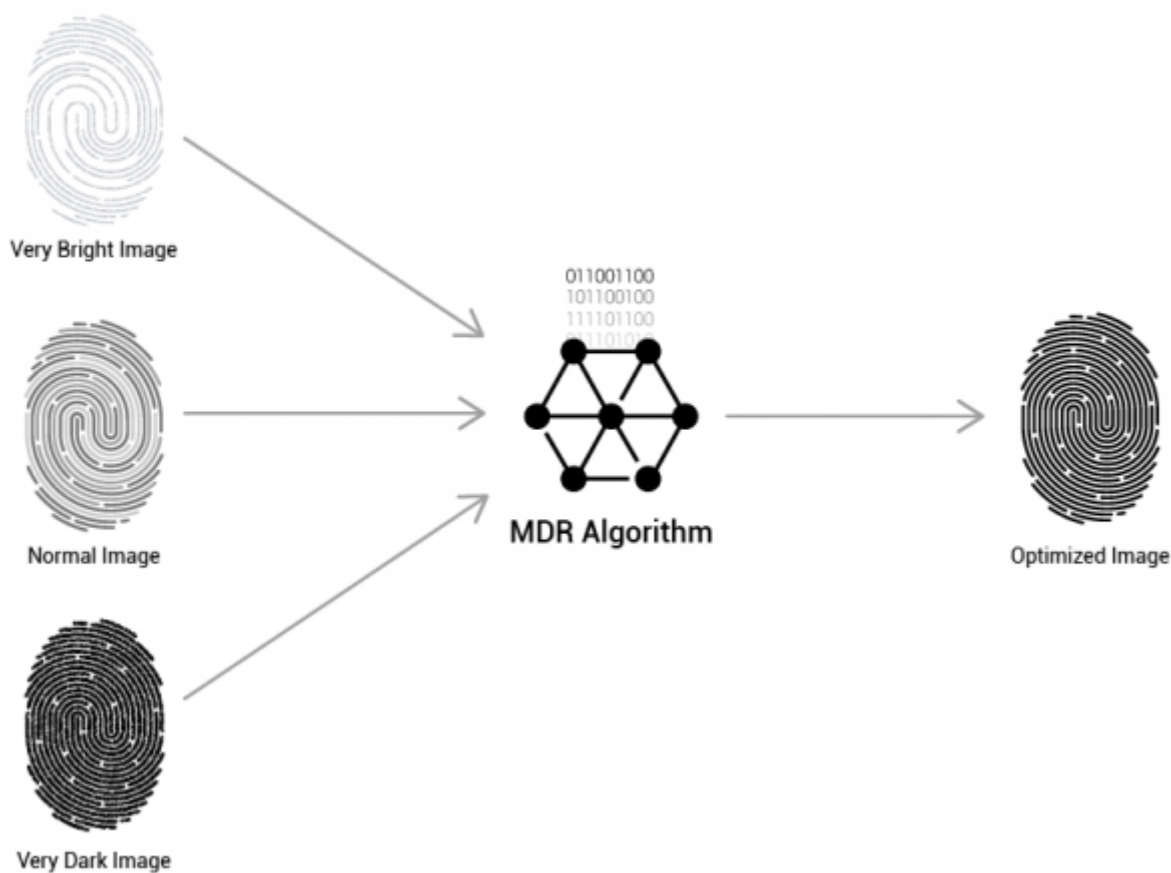

Multi-dynamic Range (MDR) Technology









Suprema's patented MDR technology works in similar mechanism to HDR of cameras. With Suprema's unique image processing algorithm, MDR technology smartly blends high-brightness images and dark images of the same object to gain optimal image quality regardless of lighting conditions.

The fingerprint image acquisition methods exquisitely enhances bright and dark part of the image









hence produces optimal result without any loss in details. With the MDR technology, BioMini scanners can produce uncompromised image quality even under direct sunlight of up to 100,000 LUX.

You can also obtain the optimal image, without any problems even in dry or wet fingers. MDR technology makes the highlights appear lighter and shadows appear darker with your fingerprints. This can help you fine-tuned fingerprint images acquired in accordance with express contrast.

20,000 Lux - Indirect Light

Light Direction	Vertical	Front	Back	Side
MDR ON				
MDR OFF				

100000 Lux - Direct Light

Light Direction	Vertical	Front	Back	Side
MDR ON				
MDR OFF				

From:

<http://kb.supremainc.com/knowledge/> -

Permanent link:

http://kb.supremainc.com/knowledge/doku.php?id=en:tc_technology_multi_dynamic_range_technology

Last update: **2016/09/20 09:20**